

mobeye[®]

USER MANUAL

Mobeye[®] CombiGuard

CM4600



CONTENTS

1. General description	5
2. Standard behaviour	6
2.1 CombiGuard with Mobeye SIM and Internet Portal	6
2.2 Mobeye CombiGuard with own SIM card	7
3. Getting started	9
3.1 Open the casing and insert the SIM card	10
3.2 Connect the water sensor	10
3.3 Connect the temperature sensor	11
3.4 Connect a (boat) battery to the input 2	11
3.5 Connect a device to the output	11
3.6 Insert the batteries	11
3.7 Connect an external power supply (optionally)	12
3.8 Connect a sensor to input 1 (optionally)	12
3.9 Network connection and program mode	13
4. Programming when using the Mobeye SIM and portal	14
4.1 Sign up in the Mobeye Internet Portal	14
4.2 Register the Mobeye SIM card	14
4.3 Configuration and synchronisation	15
4.4 Basics of the Mobeye Internet Portal	15
4.5 How to activate the CombiGuard	17
4.6 System reset	18
5. Possible settings	19
5.1 Alarm phone numbers	19
5.2 Test message	19
5.3 Input type	20
5.4 Alarm delay time	20
5.5 Inactive time	20
5.6 Alarm repeat time	20
5.7 Minimum and/or maximum temperature limit	21
5.8 Temperature calibration	21
5.9 Temperature unit	21
5.10 Threshold value for the battery voltage	21
5.11 Power failure message	21
5.12 Power failure delay time	21
5.13 Output behaviour	22
5.14 Puls time output	22
5.15 Automatic arming / disarming	22
5.16 Buttonlock	23
5.17 Low power mode	23
5.18 Call and/or SMS (own SIM cards)	23
6. Programming when using own SIM card	24
6.1 Program mode	24
6.2 Programming the settings by SMS	24
6.3 Program at least one telephone number	25
6.4 Program threshold values for the temperature	25
7. List of SMS commands for programming with own SIM	26
7.1 List of SMS commands	26

7.2	How to activate the CombiGuard	28
7.3	System reset	28
7.4	SMS reports when using own SIM card	29
7.5	Technical messages	30
8.	Status feedback	31

Attention! Very important

This user manual contains important guidelines for the installation and usage of the Mobeye® device as described in this manual. Please read these thoroughly before you start using the Mobeye® device.

In the case of damage caused by disregarding the guidelines and the instructions for use, no liability is accepted and the warranty becomes void. The user must regularly check the proper functioning of the Mobeye® device. The manufacturer cannot be held liable for (direct and indirect) damage as a result of incorrect operation or incorrect functioning of the device, software, internet or telecom connection. The manufacturer is in no way liable for the loss of personal passwords or codes.

Safety guidelines

- The permitted ambient temperature during operation may not be exceeded (not lower than -10 °C and not higher than 50 °C).
- The device is intended for use in dry and clean places.
- Protect the device from moisture, heat and water splashing. Not intended for external use.
- The guidelines for the battery usage must be regarded.
- Do not expose the device to strong vibrations.
- Do not let it fall from height.
- Do not use in an environment where any inflammable gases, vapors or dust are present or could be present.
- Repair of the device may only be carried out by people, trained for Mobeye® repair.
- If the device must be repaired, only original replacement components may be used. The use of different parts may lead to damage of the Mobeye® device.

Use in accordance with the regulations

The purpose of this device in accordance with the regulations is sending messages and making telephone calls after an alarm situation. Other uses are not permitted and may invalidate the warranty.

Battery recycling

This product contains recyclable components. When disposing of this product, please take it to a waste collection point for disposal or to your sales point. Bring empty batteries to a recycling centre or collection point.

1. GENERAL DESCRIPTION

The Mobeye CombiGuard is a monitoring device with an integrated communication module used to send alarm notifications in various alarm situations. The CombiGuard has a temperature sensor, water leakage sensor, power adapter, inputs for battery voltage or potential-free inputs and an (open collector) output. It can run battery operated or externally powered. If an external power supply is used, it can also send a power failure alarm. Since the CombiGuard is often used in the maritime world, this product is nicknamed "ShipGuard".

In order to activate the device, a few steps are to be followed.

First of all, you need to insert a SIM card. With the Mobeye SIM card, the CombiGuard uses the 4G LTE-M network. This network has a strong network coverage, deep penetrability in buildings and also works in remote areas. The Mobeye SIM card is a 'multi-provider' and can be used internationally; it may choose from several providers per country. In case of a network problem it will switch to another provider or fall back to 2G. In addition, the Mobeye SIM card offers access to the Mobeye Internet Portal. This management environment gives the device essential functions such as online programming, display of status and history, extensive possibilities for reporting messages and will also monitor test messages (keep alive). Optionally, alarm messages are sent as a push message via an app. The relevant contact person will receive instructions and an installation link on their phone.

It is also possible to place your own (2G) SIM card. The most important alarm functions such as calling and/or texting after an alarm also work. The communication goes entirely through the 2G network. The Mobeye Internet portal features will not work.

Where the installation steps differ for both modes of use, this is indicated. The use of the Mobeye Internet Portal with Mobeye SIM card is also referred to as Mobeye SIM/Portal.

2. STANDARD BEHAVIOUR

2.1 COMBIGUARD WITH MOBEYE SIM AND INTERNET PORTAL

The Mobeye CombiGuard with Mobeye SIM card and registered on the Mobeye Internet Portal, has the following behaviour as factory settings:

- In the situation of a temperature alarm the Mobeye CombiGuard sends an alarm message to the Mobeye Internet Portal. The Portal forwards the alarm as push notification, call (spoken message), text message and/or e-mail to the 'alarm contacts'. As soon as the temperature gets back to a value inside the range, a recovery message follows.
- In the situation of a water alarm the WaterGuard sends an alarm message to the Mobeye Internet Portal, to be forwarded to the 'alarm contacts'. As soon as the water detection has ended, a recovery message follows.
- When the temperature or water sensor is removed, the Mobeye CombiGuard sends a message via the Mobeye Internet Portal.
- If a (boat) battery is connected to an analogue input and its voltage is below the set threshold value, the Mobeye CombiGuard sends an alarm message to the Mobeye Internet Portal to be forwarded to the 'alarm contacts'. As soon as the voltage recovers a recovery message is sent.
- In case the second input is activated by a sensor, the Mobeye CombiGuard sends an alarm message via the Mobeye Internet Portal.
- When an external power supply is used and a power failure occurs, the Mobeye CombiGuard sends a 'power failure' message to Mobeye Internet Portal, to be forwarded to the 'alarm contacts'. When the power is restored, the Mobeye CombiGuard sends a 'power restored' message.
- When one of the sensor inputs remain in the alarm status, the Mobeye CombiGuard repeats sending the alarm message via the Mobeye Internet Portal every four hours.
- The output can be switched via SMS command.
- When the batteries need to be replaced, the Mobeye CombiGuard sends a 'low battery' message to the Mobeye Internet Portal. The portal forwards this to the 'service' contacts.
- The unit will send test messages to the portal as communication check (default: every 7 days). If these are not received in time, the portal sends an exception message to the 'service' contacts.

Chapter 5 describes how to influence the standard behaviour.

Communication between the Mobeye CombiGuard and the Mobeye Internet Portal takes place via data (and SMS as fallback). Messages can be sent as a push message to the Mobeye Messages app (via the portal). If a contact confirms the receipt of the message, the subsequent contacts will not receive it (alternatively a group message is possible). If the message is not confirmed (or the app is not used), it can still be sent by call (with spoken text). SMS and email are also possible. A credit system applies to calling and SMS texting, the other methods are unlimited. At initialisation and contract renewal, a starting credit is loaded, which is sufficient for most users. In the event of a low balance, the account holder will receive an email with the advice to top up online. The credit balance has an unlimited validity period and applies to all devices under one account.

2.2 MOBEYE COMBIGUARD WITH OWN SIM CARD

The Mobeye CombiGuard, equipped with your own SIM card, has the following standard behavior as factory settings:

- In the situation of a temperature alarm, the Mobeye CombiGuard sends an alarm SMS text message and calls the phone numbers programmed in by the user. The SMS message contains the text 'Temperature too high' or 'Temperature too low', followed by the measured temperature.
- As soon as the temperature gets back to a value inside the range, an SMS text message is sent to the phone numbers programmed in by the user containing the text 'Temperature OK'.
- In the situation of a water alarm, the Mobeye WaterGuard sends an alarm SMS text message and calls the phone numbers programmed in by the user. The SMS message contains the text 'Mobeye water alarm'.
- As soon as the water detection has ended, an SMS text message is sent to the phone numbers programmed in by the user containing the text 'Water level OK'.
- When the temperature or water sensor is removed, the Mobeye CombiGuard sends an SMS text message to first telephone number (TEL1) containing the text 'Temperature sensor not connected'.
- If a (boat) battery is connected to the analogue input and its voltage is below the set threshold value the Mobeye CombiGuard sends an alarm SMS text message and calls the phone numbers programmed in by the user. The SMS message contains the text 'Input 1 low' followed by the

measured value. As soon as the voltage recovers the numbers will receive an SMS text message containing the text 'Input 1 OK' followed by the measured value.

- When the second input is activated by a sensor, the Mobeye CombiGuard sends an alarm SMS text message and calls the phone numbers programmed in by the user.
- The output can be switched via SMS command.
- When an external power supply is used and a power failure occurs, the Mobeye CombiGuard sends a 'power failure' SMS text message and calls the numbers. When the power is restored, the Mobeye CombiGuard sends a 'power restored' SMS text message.
- When the batteries need to be replaced, the Mobeye CombiGuard sends a 'low battery' SMS text message to the first telephone number.

Chapter 5 describes how to influence the standard behaviour.

3. GETTING STARTED

To get started with the Mobeye CombiGuard, at least the following steps need to be taken in the following order:


1. Open the casing and insert the SIM card
2. Connect the water sensor (optionally)
3. Connect the temperature sensor (optionally)
4. Connect the external (boat) battery (optionally)
5. Insert the batteries
6. Connect an external power supply (optionally)
7. Connect a sensor to the additional input (optionally)
8. Programming when using the Mobeye SIM/Portal
 - a. Sign up in the Mobeye Internet Portal
 - b. Activate the SIM card and the device
 - c. Program the settings and synchronise
 - d. Use of the portal and app
9. Programming when using your own SIM card
 - a. Enter the program mode
 - b. Program the settings

Steps 1 to 7 are described in this chapter.


Step 8 is described in chapter 4. Step 9 can be found in chapter 6.

3.1 OPEN THE CASING AND INSERT THE SIM CARD

Open the casing by pressing the corners of the front panel with both thumbs.

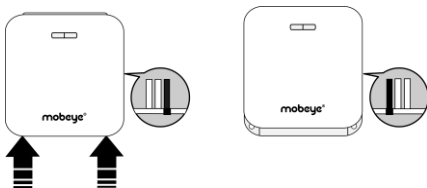

Insert the SIM card into the module.

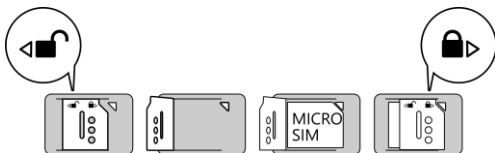

When using the Mobeye SIM card:

The Mobeye SIM card is PIN code secured and will only work in a Mobeye device. Please do not place it in another device.

When using your own SIM card:

An own SIM card has a "micro" format, is suitable for the 2G network and can make calls and send text messages. The PIN code is "0000", or the SIM card is PIN code free.

(A PIN code can be changed or removed by putting the SIM card in to any mobile phone and entering the 'security' menu.)

Note: make sure that the power supply is removed when inserting or changing the SIM card. The settings are stored in the device memory.

3.2 CONNECT THE WATER SENSOR

Plug the water sensor into the socket (fourth from left) and press it firmly.



3.3 CONNECT THE TEMPERATURE SENSOR

Plug the external temperature sensor into the socket (fifth from left) and press it firmly.




3.4 CONNECT A (BOAT) BATTERY TO THE INPUT 2

The battery voltage can be measured via input 2. Be aware that the maximum battery voltage is 48 V (peaks up to 60 V).

Connect the wires at the '+' side to the '+' of input 2, the '-' side to the '-' (see picture).

A second battery can be connected to input 1, as long as the input type is set to "AN" (refer to 5.3).

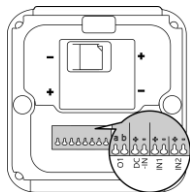

Be aware: connecting the wires wrongly can lead to a defective device!

3.5 CONNECT A DEVICE TO THE OUTPUT

The Mobeye CombiGuard features an open collector output. The output can switch automatically after an alarm or after receiving the SMS text message CODE O1ON and CODE O1OFF (e.g. 1111 O1ON). It is possible to make this switch only during a pulse time, after which it automatically switches back. (see 5.13 and 5.14).

The output provides a maximum current of 200 mA. The output voltage is equal to the input voltage (e.g. 12V DC or 24V DC). To switch heavier devices, a relay must be placed behind the output with an input voltage equal to the input voltage of the CM4600. The required switching voltage of the relay depends on the device that is connected.

NOTE: The output does function when the CombiGuard is battery-operated.

 
3.6 INSERT THE BATTERIES

Insert the two batteries (CR123) in the module. Use the +/- indication for the correct placement. If you replace the batteries the settings will not be deleted, since they are stored in the device memory.

3.7 CONNECT AN EXTERNAL POWER SUPPLY (OPTIONALLY)

Although the CombiGuard is designed to run on batteries, it is possible to use an external power supply. In this mode the module is always connected with the mobile network and therefore always in program mode. When the power fails, the batteries take over and a power failure alarm message is sent. The module continues operating albeit in the low power mode. This means the communication module switches off and only establishes network connection when it needs to send an alarm notification, test message or low battery alert.

Connect the power adapter (or any other regulated 12-24V DC power supply) to the power input of the connector (press on the green pins to connect the wires).




- | | | |
|-----------------|------------------------------|---------------------------|
| | <u>Mobeye adapter 10027</u> | <u>position</u> |
| - V+ to "+" | black lead with white stripe | left |
| - Ground to "-" | black lead | 2 nd from left |

3.8 CONNECT A SENSOR TO INPUT 1 (OPTIONALLY)

Input 1 is available as potential free contact (NO or NC) or for monitoring a second battery (AN). Likewise, input 2 can be used as a potential-free input.

Insert the 2 wires of an external sensor through the hole in the casing and insert them in the two connectors of input 1 (press on the green pins for connecting the wires). It does not matter which wire is connected to which connector.

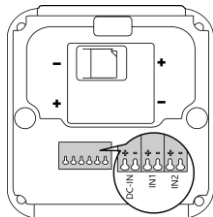

As default input 1 is programmed as Normally Open (NO) contact. This means the input is triggered if the input is closed for at least 1 second. In case the contact is NC or AN, see paragraph 5.3. If the sensor needs to be activated for a longer period before triggering an alarm, see 5.4.

3.9 NETWORK CONNECTION AND PROGRAM MODE

After placing the batteries (and external power) the Mobeye CombiGuard will search for the network. The outside LED flashes green and red. This process normally takes 10-30 seconds, in a new device this can take some minutes. When the network has been established the LED will first blink green rapidly and next stay green (or flashes 1 sec. on/1 sec. off in case the unit has not been configured yet).

In a battery-operated unit a time-out occurs after 3 minutes, after which the communication module switches off in order to save the batteries. In this low power mode the LED flashes once per 3 seconds. It will search for network connection once it needs to send notifications. It can also be forced to establish a network connection by re-inserting the batteries or pressing the button at the back for 5 seconds.



If the CombiGuard is connected to an external power supply, it has continuous network connection and is permanently in program mode.

4. PROGRAMMING WHEN USING THE MOBEYE SIM AND PORTAL

4.1 SIGN UP IN THE MOBEYE INTERNET PORTAL

Go to www.mymobeye.com
and sign up for a new account.
Follow the instructions on the screen.



You will receive an e-mail to confirm the new account. After confirmation login on the portal.

If you do not receive this e-mail, please check your spam box or ask Mobeye (info@mobeye.com).

4.2 REGISTER THE MOBEYE SIM CARD

To activate the Mobeye SIM card in the Mobeye Internet Portal, choose 'activate SIM card' on the 'Add Device' screen.



Add Device

Fill in the SIM card number. This is the number written on the plastic SIM card below the barcode. You can take the entire number or only the last 8 digits.



Activate SIM card

If the SIM card and batteries are already installed, a pop-up will appear, where you assign a name and location to the device. You can change these later.

(If you have not installed the SIM card and batteries before, you will first be asked to select the device type, in your case it will be "CM4600".)

At the moment you accept the price and terms, you confirm the subscription. You will be taken to the payment screen. You will receive an invoice for the mentioned amount. Your new device is now visible on the dashboard.

Before the device is ready for use, first prepare the settings and alarm forwarding. See next paragraphs to learn how to do this.

4.3 CONFIGURATION AND SYNCHRONISATION

The device settings can be programmed in the Mobeye Internet Portal. In this way you prepare the settings, to be picked up by the device. Since the Mobeye device is leading in the communication between the portal and the device, the data synchronisation is done after:

- 1) any message to the portal (regular test message, alarm, low batteries).
- 2) reconnecting power and reinserting batteries.
- 3) pressing the button (at the backside) for 5 seconds.
- 4) pressing the SYNC symbol in the portal settings (only visible if external power is connected), or sending the SMS command 1111 SYNC to the phone number in the unit (1111 is the security code in factory settings).

During the data exchange with the portal, the LED flashes green. A battery-operated unit will first blink red-green while connecting to the network.

4.4 BASICS OF THE MOBEYE INTERNET PORTAL

Dashboard


With multiple devices, the dashboard shows all devices, with the (alarm) messages in the last 24 hours, (missed) test messages and low battery status. If devices in the dashboard have logging functions, the dashboard changes when you click on "Diagrams" or "Gauges" in the gray bar. Select a device to go to the details of a specific device.

Status & History

The status block shows values about the status of the unit.

If the "Synchronised" status is set to "No", there are new settings or alarm numbers that still need to be transferred to the device.

The network strength value at the last communication session is shown. If the value is lower than -98 dB, consider another location for the device.

Click on the position icon  to see the geographical location during the last report. Note: this is an indication based on "cell-id".

The history displays all historical events. Click on "all events" to see the list.



Device Settings

The device settings can be changed via the Mobeye Internet Portal. To do this, click on the "edit" icon and type in the security code (factory setting is "1111"). See chapter 5 for the description per setting.

After saving the new settings, they must be retrieved by the device (synchronized). See 4.3 for more information about synchronizing.

In the block "device data" the name and location of the device can be changed. These texts are mentioned in the call, text message and e-mail to indicate the device. A free text is available as an internal comment field. This is not included in reports.

Alarm dispatch and the Mobeye app

In the block "Contacts for messages" you link the contact persons who receive alarm and service messages via push notification, call, text message and/or e-mail. Service messages can be warnings about missed test messages and low battery voltage. To add a contact person, first create it as a contact. This can be done via the  or in the main menu under the blue Contacts tab. For push notifications, install the  Mobeye Messages app from the Play Store/App Store on the phone.

- Select "App message" for a push notification. A contact will then (once) receive a code via SMS to register in the app.
- Optionally select "Voice call" as a fallback: If none of the contacts confirm the app message, a voice call will follow.
- If no app message is set for a contact, but call is set, this call is always made (regardless of whether other contacts receive push notifications).
- If SMS and/or email is set up for a contact, this is always sent (possibly alongside the app message).
- An app message can be sent as a group message (to all contacts at once) or via an escalation plan (where a "confirmation" prevents the app message from being forwarded to a next contact).
- When selecting "Escalation", adjust the order with the arrows ▲ and ▼.

Hints:

- Always include an email contact for service notifications.
- During testing, we recommend using the app and email (and minimizing calls and texts) to save on credit.
- If the app asks for a new code or a contact has a new phone, send it from the contacts tab (change contact).

Message texts

The message texts contain the texts that, in addition to the name and location, are included in the messages. These texts can be adapted to your own text. Forwarding a notification can be prevented by starting the message text with \$\$--.

4.5 HOW TO ACTIVATE THE COMBIGUARD

After the previous steps the Mobeye CombiGuard is ready for use. It is armed automatically.

In order to switch off (disarm) the Mobeye CombiGuard:

- Press the button at the backside for 1 second. The green LED switches off to indicate the disarmed status.

In the disarmed status the Mobeye CombiGuard will not send alarm notifications. The unit remains active and is able to switch on time-controlled and to send test and 'low battery voltage' messages.



In order to switch on (arm) the Mobeye CombiGuard:

- Press the button at the backside for 1 second. The green LED blinks once every 3 seconds (battery-powered) or stays on continuously (in case of an external power supply).

If powered externally (with network connection), switching can be done via SMS commands:

SMS command to switch on:	CODE ARM	(e.g. 1111 ARM)
SMS command to switch off:	CODE DISARM	(e.g. 1111 DISARM)

To update the status in the Mobeye Internet Portal: press the button for 5 seconds, or - if the device is externally powered - send a question mark to the unit (without code).

SMS command status update: ? The status in the portal including the temperature and battery value will be refreshed.

4.6 SYSTEM RESET

To reset the CombiGuard two steps are necessary, in following sequence:

1. Delete the Mobeye CombiGuard from the Mobeye Internet Portal

Go to "Device Settings" and click on the delete icon in the "Device" block. Then confirm your choice.

2. Reset the Mobeye CombiGuard to its factory settings

1. Remove the batteries and SIM card (and external power supply).
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds.
3. Release the button immediately after the LED starts to flash.
4. If relevant, connect the external power supply.

After a successful reset, the status LED will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

The SIM card is now disconnected and is visible on the "Add device" screen. The SIM card can be used again in another (or the same) Mobeye device in combination with the portal.

5. POSSIBLE SETTINGS

The Mobeye CombiGuard has many setting options that influence the behaviour of the module. If connected on the Mobeye Internet Portal, the settings are prepared in the portal (see chapter 4). If your own SIM card is used, programming is done via SMS commands (see chapter 9).

5.1 ALARM PHONE NUMBERS

When using Mobeye Internet Portal: an unlimited number of contacts can receive the alarm messages. These are set in the portal.

When using your own SIM card: the Mobeye CombiGuard can inform 5 telephone numbers in the event of an alarm. It is mandatory to set at least one number (TEL1). The numbers set are used for the telephone calls and/or SMS messages from the unit.

5.2 TEST MESSAGE

When using the Mobeye Internet Portal: The Mobeye CombiGuard can send regular test messages (keep alive) to the Mobeye Internet Portal, to ensure the proper functioning of the unit. The test message will also be sent if the unit is disarmed. The Mobeye Internet Portal expects the test message and checks the timely receipt. The monitoring of the test messages follows the 'management by exception' rule: only if the message was not received, the 'service' contacts will receive a notification.

The timing of the test message can be programmed. Since new settings (options) will be synchronised after the test message, setting a specific time of the test message may help the process of remote programming. Example: if you force a daily test message at 17.30 hrs, you can prepare new settings and be sure they are loaded into the device before the evening.

The interval between the test messages can be set between 0 days (no test message) and 30 days. The default test interval is set to "7" (weekly).

When using your own SIM card: The Mobeye CombiGuard can send regular test SMS messages (keep alive) to the first phone number (TEL1), to ensure the proper functioning of the unit. The test message function is only active if the unit is armed. The timing of the test message is determined by the time of programming. The test time can also be set. The interval between the test

messages can be set between 0 days (no test message) and 30 days. The default test interval is set to "0" (no test message).

5.3 INPUT TYPE

The input type defines the character of the additional inputs IN1 and IN2. This can be Normally Open (NO), Normally Closed (NC), or Analog (AN). If an input is set to "NO", the alarm will be triggered as soon as the terminals of the input are closed. If the input is set to NC, the alarm is triggered when the connection between the input terminals is broken. With AN, the input measures the input voltage and send an alarm if it falls below the set value. The default input type is set to "NO" for input 1 and "AN" for input 2.

5.4 ALARM DELAY TIME

The input delay time defines the time that the input is triggered before an alarm is initiated. If the input returns to the non-alarm status within the delay time, no alarm is sent. The time can be set between 0 and 999 seconds. As default, the input delay time is set to 1 second for input 1 and input 2. For the water sensor it is 30 seconds. The delay for the temperature alarm is adjustable in minutes with the factory setting 0.

5.5 INACTIVE TIME

The "inactive time" defines the time an input is not active after an activation. During the inactive time, no new alarm message will be sent. Only when the input returned to the non-alarm status, gets activated again and remains active, an alarm will be sent yet after the inactive time. If the time is set to "0" (minutes), the input will be active again immediately after returning to the non-alarm status. The time can be set between 0 and 60 minutes. As default, the inactive time is set to "0".

5.6 ALARM REPEAT TIME

In order to emphasize the urgency of the alarm messages, all alarms can be repeated. As long as the temperature value or an input has not returned to the inactive status, the alarm messages will be repeated after the 'alarm repeat time'. The repeat interval can be set between 0 (no repeat) and 24 hours. As default the alarm repeat time is set to 4 hours.

5.7 MINIMUM AND/OR MAXIMUM TEMPERATURE LIMIT

A separate high and/or low limit for the temperature can be set. The limits can be set between -35 °C and +70 °C, with one decimal. Negative values are set by a "-" before the value.

5.8 TEMPERATURE CALIBRATION

The high quality digital temperature sensor is calibrated in the factory. For special applications it is possible to calibrate the sensor and program a correction. The adjusted temperature will be used in the measurement and reports. Example: the Mobeye CombiGuard measures 13 °C. Actual ambient temperature is measured as 13,5 °C. To adjust this difference, +0,5 degrees shall be programmed.

5.9 TEMPERATURE UNIT

The temperature can be programmed and displayed in degrees Celsius (C) or Fahrenheit (F). As default this unit is set to C.

5.10 THRESHOLD VALUE FOR THE BATTERY VOLTAGE

To monitor the battery voltage, the lower limit needs to be programmed. It is advised to set a value where the battery voltage is too low, but the battery itself will not yet get defected (response to an alarm then makes sense). A value between 0 and 48V can be entered, with one decimal (e.g. 10 or 10,2).

5.11 POWER FAILURE MESSAGE

If the Mobeye CombiGuard is supplied with external power and the power fails, it can send alarm messages. If the setting is "OFF", no message is sent. When set to "ALARM", notifications are sent to the set contacts. When using your own SIM card, the setting "ALERT" only results in an SMS notification to TEL1. The default setting is "ALARM".

5.12 POWER FAILURE DELAY TIME

To avoid false alarms caused by short power failures, a power failure delay time can be set. This defines the time between the initial power failure and the alarm notification. If the power is restored within the delay time, no

alarm is sent. The time can be set between 0 and 999 minutes. As default, the delay time is set to "0".

5.13 OUTPUT BEHAVIOUR

The output can switch automatically -if the unit is externally powered- after an alarm situation (ALARM). With a pulse time of 0, the output remains on as long as one of the sensors (inputs) is in alarm status. For controlling the output via SMS command, the output behaviour must be set to "SMS". The pulse time defines the duration of the switching (see 5.14). By default this value is set to "OFF".

5.14 PULS TIME OUTPUT

The pulse time indicates how long the output remains switched after the unit receives the SMS text message CODE O1ON (e.g. 1111 O1ON), before it switches back again. It is adjustable between 1 and 9999 seconds. If the pulse time is set to 0 seconds, the output will not switch back automatically, but only after receiving the SMS command CODE O1OFF (e.g. 1111 O1OFF). By default, the pulse time is set to "5" seconds.

5.15 AUTOMATIC ARMING / DISARMING

The Mobeye CombiGuard only works if the unit is armed, which is done via the on/off button. It is possible to automatically arm and disarm the unit, based on an arming and/or disarming time scheme. Two schemes can be entered, which can be assigned to the days in the week (e.g. to have a different weekend scheme).

As default the automatic (dis) arming times are valid for all days. It is possible to assign them to only a few days in the week. In this way it is possible to have two different schemes, which are valid on different days.

As value the weekdays can be entered. Monday is 1, Tuesday is 2, etc. If the scheme is valid for several days, the days can be set in a row (e.g. 12345 means Monday till Friday).

Example: to arm the system only during weekdays, from 6AM to 7PM, set the TIMEARM1 to 06:00, TIMEDISARM1 to 19:00 and DAYS1 to 12345.

(Only) when using your own SIM card, the DATE and TIME must also be set manually. The portal synchronizes this automatically.

5.16 BUTTONLOCK

It can be useful to lock the on/off button to prevent the unit from being switched off unintentionally. As default the buttonlock is unlocked (so, the button is enabled). To disable the button, the buttonlock needs to be switched to "ON". Synchronising the settings to the portal, by pressing for 5 seconds, always works.

5.17 LOW POWER MODE

The low power mode is only important with an externally powered Mobeye CombiGuard. If the (factory) mode is set to "OFF", the communication module will always have a network connection. When set to "ON" the behaviour is the same as for a battery-powered device; the communication module is turned off as much as possible to minimize power consumption. Note: in low power mode the module cannot be reached via SMS commands.

5.18 CALL AND/OR SMS (OWN SIM CARDS)

When using your own SIM card, by default the CombiGuard will call and send SMS text messages. It is possible to suppress one of these. By turning off the CALL, the unit will only send SMS text messages. By turning off the SMS, it will only call. The default both values are set to "ON".

6. PROGRAMMING WHEN USING OWN SIM CARD

If your own SIM card is used, programming proceeds via SMS commands. For this purpose the communication module requires network connection.

6.1 PROGRAM MODE

If the CombiGuard is connected to an external power supply, it has continuous network connection and is permanently in program mode.

A battery-operated Mobeye CombiGuard switches to the program mode after re-inserting the batteries or pressing the button at the back for 5 seconds. While searching for the network connection the outside LED flashes green and red. This process normally takes 10-30 seconds. When the network has been established the LED will first blink green rapidly and next stay green (or flashes 1 sec. on/1 sec. off in case the unit has not been configured yet).

In this program mode the device is ready to receive commands and settings. In a battery-operated unit a time-out occurs if no correct command is received for 3 minutes, after which the communication module switches off in order to save the batteries. In this low power mode the LED flashes once per 3 seconds to indicate it is armed.

6.2 PROGRAMMING THE SETTINGS BY SMS

When using your own SIM card, the settings are programmed in by SMS text messages:

1. Make sure the CombiGuard is in program mode (please refer to 6.1).
2. Send an SMS text message with the (security) code and the command.
3. The green LED blinks 3 times to indicate the successful configuration. In case of an incorrect command, the red LED flashes 5 times.

SMS messages have the following content: **CODE COMMAND:OPTION**

Example: **1111 TEL1:0044772345678**

- CODE stands for the security code, factory setting is 1111.
- Do not forget the space character between (security) code and command.
- The commands are case insensitive.
- Several commands may be combined in one SMS message (with a maximum of 160 characters) by placing a # between the commands.

CODE COMMAND:OPTION#COMMAND:OPTION#COMMAND:OPTION

- All settings are saved and remain saved, even when the unit has no power or the batteries are removed.

In chapter 5 the options are explained.

In chapter 7.1 all possible SMS commands are listed.

6.3 PROGRAM AT LEAST ONE TELEPHONE NUMBER

The Mobeye CombiGuard is able to send messages up to 5 telephone numbers. The first telephone number (TEL1) is mandatory. This number will receive, next to alarm message, also system messages such as battery low and keep-alive message. The telephone number TEL1 is programmed via an SMS command. This can be done from any telephone, making it possible to program someone else's number. The TEL1 telephone will receive a confirmation text message with the security code.

SMS command 1st telephone number: CODE TEL1:
example: 1111 TEL1:07212345678
.... similar for TEL2 ... TEL5

To program international numbers, start with 00 followed by the country code (for example 0044123456789).

example: 1111 TEL1:0044612345678

6.4 PROGRAM THRESHOLD VALUES FOR THE TEMPERATURE

A separate high and/or low temperature limit can be set for the temperature sensor. Both limits can be set between -35 °C and +70 °C with one decimal. Negative values are entered by placing a "-" in front of the value.

To enter a temperature limit, be sure the Mobeye CombiGuard is in program mode. Send an SMS text message to the unit with following content:

SMS command lower limit: 1111 LTL:
example: 1111 LTL:-5
SMS command upper limit: 1111 HTL:
example: 1111 HTL:25,5

Please mind the space behind 1111.

7. LIST OF SMS COMMANDS FOR PROGRAMMING WITH OWN SIM

7.1 LIST OF SMS COMMANDS

When using your own SIM card, the settings are programmed via SMS commands. See chapter 6 for the programming method and chapter 5 for an explanation per setting. The commands are case insensitive.

Setting	SMS command	Options	Default value
Change security code	INSTCODE:	0000 ... 9999	1111
Set telephone number for alarm messages	TEL1: ... TEL5:		Empty
Delete telephone number	DEL1 ... DEL5		
Interval 'test SMS'	TEST:	0 ... 30 (days)	0
Time test message	TESTTIME:	hhmm	
Identification text	NAME:	20 characters	Mobeye
Input type input 1	TYPEIN1:	NO, NC, AN	NO
Input type input 2	TYPEIN2:	NO, NC, AN	AN
Delay on input 1	DELAY1:	0 ... 999 (sec)	1
Delay on input 2	DELAY2:	0 ... 999 (sec)	1
Delay on water input	DELAY3:	0 ... 999 (sec)	30
Inactive time input 1	INACTIVEIN1:	0 ... 60 (min)	0
Inactive time input 2	INACTIVEIN2:	0 ... 60 (min)	0
Inactive time waterinput	INACTIVEIN3:	0 ... 60 (min)	0
Inactive time temperat.	INACTIVETEMP:	00 ... 60 (min)	0
Alarm repeat time	REPEAT:	0 ... 24 (hour)	4
Lower limit temperature	LTL:	-35,0 ... 70,0 (°C)	OFF
Higher limit temperature	HTL:	-35,0 ... 70,0 (°C)	OFF
Temperature delay	DELAYTEMP:	000 ... 999 (min)	0
Temperature calibration	TOFFSET:	-5,0 ... 5,0 (°C)	0
Temperature unit	TEMPUNIT:	C, F	C
Lower limit battery input 1	AN1LOW:	0 ... 48,0	Off
Lower limit battery input 2	AN2LOW:	0 ... 48,0	Off
Power message	POWERMESSAGE:	OFF,ALERT,ALARM	ALARM
Power failure delay time	DELAYPOW:	0 ... 999 (min)	0

Setting	SMS command	Options	Default value
Output behaviour	OUTPUT:	OFF,ALARM,SMS	OFF
Pulse time output	TO1:	0 ... 9999 (sec)	5
Actual time	TIME:	hhmm	Empty
Actual date	DATE:	yyyymmdd	Empty
Arming time	TIMEARM1:	hhmm	Empty
Disarming time	TIMEDISARM1:	hhmm	Empty
2nd arming time	TIMEARM2:	hhmm	Empty
2nd disarming time	TIMEDISARM2:	hhmm	Empty
Assigning times 1	DAYS1:	1234567	Empty
Assigning times 2	DAYS2:	1234567	Empty
Use of on/off button	BUTTONLOCK:	ON (button locked) OFF (unlocked)	OFF
Low power status	LOWPOWER:	ON, OFF	OFF
Call on/off	CALL:	ON, OFF	ON
SMS on/off	SMS:	ON, OFF	ON
Alarm text low temperature	TEXT1:	20 characters	Temperature too high:
Alarm text high temperature	TEXT2:	20 characters	Temperature too low:
Text alarm restore	TEXT3:	20 characters	Temperature OK:
Alarm text NO/NC input 1	TEXT4:	20 characters	Alarm 1
Alarm text NO/NC input 2	TEXT5:	20 characters	Alarm 2
Alarm text AN input 1	TEXT6:	20 characters	Input 1 low
Text recovery AN input 1	TEXT7:	20 characters	Input 1 OK
Alarm text AN input 2	TEXT8:	20 characters	Input 2 low
Text recovery AN input 2	TEXT9:	20 characters	Input 2 OK
Alarm text water alarm	TEXT10:	20 characters	Water alarm
Text water recovery	TEXT11:	20 characters	Water level OK
Alarm text power failure	TEXT12:	20 characters	Power failure
Alarm text power restore	TEXT13:	20 characters	Power restored

Examples:

Set phone number 1: 1111 TEL1:0712345678

Delete phone number 1: 1111 del1

Be aware of the space between "1111" and the command.

7.2 HOW TO ACTIVATE THE COMBIGUARD

After the previous steps the Mobeye CombiGuard is ready for use. It is armed automatically.

In order to switch off (disarm) the CombiGuard:

- Press the button at the backside for 1 second. The green LED switches off to indicate the disarmed status.

In the disarmed status the Mobeye CombiGuard will not send alarm notifications. The unit remains active and is able to switch on time-controlled and to send 'low battery voltage' messages.



In order to switch on (arm) the Mobeye CombiGuard:

- Press the button at the backside for 1 second. The green LED blinks once every 3 seconds (battery-powered) or stays on continuously (in case of an external power supply).

If powered externally (with network connection), switching can be done via SMS commands:

SMS command to switch on:	CODE ARM	(e.g. 1111 ARM)
SMS command to switch off:	CODE DISARM	(e.g. 1111 DISARM)

7.3 SYSTEM RESET

To reset the Mobeye CombiGuard to its factory settings:

1. Remove the batteries and SIM card (and external power supply).
2. Press the outside button while reinserting the batteries. Keep it pressed for (about) another 5 seconds.
3. Release the button immediately after the LED starts to flash.

After a successful reset, the status LED will blink green to indicate that the module is not configured. The security code is back to factory settings as well.

7.4 SMS REPORTS WHEN USING OWN SIM CARD

Several lists and status reports can be retrieved by sending an SMS text message to the Mobeye CombiGuard, from any telephone number. Before sending the request, make sure the unit is in the program mode (see 6.1).

Upon sending the command, the Mobeye CombiGuard returns an SMS text message to the originator of the request. The commands are case insensitive.

ACTUAL TEMPERATURE

The actual temperature values as measured by the CombiGuard can be requested by sending an SMS text message with the content (without code):

?

STATUS REQUEST

The status includes the armed/disarmed status, status of the inputs, power and batteries. The status can be requested by following SMS text message:

SMS command status request:	STATUS?
example:	1111 STATUS?

LIST OF SETTINGS

The settings can be requested by sending following SMS text message:

SMS command list basic settings:	SET?
SMS command list advanced settings:	SETA?
SMS command list of texts:	TEXT?
example:	1111 SET?

LIST OF PHONE NUMBERS

The list of phone numbers can be requested by following SMS text message:

SMS command list of phone numbers:	CALL?
example:	1111 CALL?

7.5 TECHNICAL MESSAGES

In the event of technical issues the telephone number programmed in at position 1 (TEL1) receives an SMS message. Possible technical messages are:

Message	Reason
Low batteries, external power supply OK	Power is available, batteries need to be replaced.
No external power supply, batteries OK	No external power supply, batteries are able to take over operation in low power mode.
Low batteries, no external power supply	No external power supply, batteries need to be replaced.
External power supply OK, batteries OK	The external power is restored (or the adapter is plugged in a socket), batteries do not need to be replaced.
(delayed message)	If (delayed message) is added to the SMS text messages, the message couldn't be sent earlier, due to a SIM card failure or GSM network failure.
Batteries too low. Module shutting down.	The module has shut down due to low voltage. Replace the batteries or connect the power supply to restart the unit.
Module restarted. Power supply [status]. Batteries [status].	The module has been able to restart after a shutdown.

When receiving one of the above mentioned technical messages, please take appropriate action as soon as possible.

8. STATUS FEEDBACK

LED pattern	Status	Required action
Blinking green, 1 second on / 1 second off	Module not configured	Configure at least one telephone number.
1 green flash every 3 seconds	Module is switched on, powered by batteries	No action required.
Green LED stays on continuously	Module is switched on, powered by an external source	No action required.
Flashing red/ green every second	Module establishes network connection	Wait until the network connection is established.
2 flashes red, every 3 seconds	No GSM connection	Try the SIM card in any mobile telephone; replace SIM card using other telecom provider; try the module at another location.
3 flashes red, every 3 seconds	No valid SIM card or wrong PIN	Try the SIM card in any mobile telephone; remove PIN code; check credit; replace SIM card.
Blinking 3 times green	Successful programming action	No action required.
Blinking 5 times red	Faulty programming action	Check SMS command.
4 red flashes every 3 seconds	Low batteries	Replace both batteries.
Quickly flashing green	Module exchanges data with portal	No action required

Technical specifications

Communication	: 4G LTE-M, Fallback 2G 900/1800 MHz
Batteries	: 2* CR123 (lithium) recommended: Varta, Panasonic and Energizer (please no Duracell or Philips)
Battery life in normal mode	: > 1 year (battery operated) : > 3 years (external power supply)
Ext. power connection (optional)	: 12 -24V DC (+/- 2V DC) / min. 500 mA any 24 VDC power source needs to be regulated
Power consumption low power	: ca. 50 μ A stand-by / max. ca. 500 mA
Power consumption 12-24V	: ca. 50 mA stand-by / max. ca. 500 mA
Dimensions	: 94 x 94 x 28 mm
Ambient temperature	: -10 °C until +50 °C
Temperature sensor head	: -35 °C tot +70 °C

This product is designed and manufactured in the Netherlands.
For more information, visit www.mobeye.com.

This manual is published by Mobeye®.

All rights, the translation included are reserved. Any reproduction, either photocopy, microfilm or saved in an automated data dictionary, only after written approval of the Publisher. Reprinting, even in summary, is prohibited.

This user manual meets the technical requirements at the moment of printing. Changes in technology and equipment are reserved.

© **Mobeye, version CM4600-EN220410**



Declaration of Conformity

Herewith we, Mobeye, declare that the

Mobeye CM41 telemetry module

And the derived products

CM4000, CM4100, CM4200, CM4300, CM4300-FS, CM4410, CM4500, CM4600, CM4610,
CML4015, CML4055, CML4255, CML4275, CML4285, CMVXI-R, iCM41

are in compliance with the essential requirements of the following European standards / EU Directives:

Directive 214/35/EU (low voltage directive)

Directive 2014/30/EU (electromagnetic compatibility)

Directive 2014/53/EU (RED)

The conformity with the essential requirements set out in Art.3 of the 2014/53/EU has been demonstrated against the following harmonized standards:

EN 60950-1: 2006 + A11: 2009 + A1: 2010 + A12: 2011 + A2: 2013
EN 62311: 2008
EN 301 489-1 V2.1.1, Draft EN 301 489-52 V1.1.0
EN 301 511 V12.5.1

Mobeye B.V.
Poeldonkweg 5
52116 JX 's-Hertogenbosch
The Netherlands

Date: 14 april 2021
Name: J.P.K. van de Vijver
Position: Managing Director
Signature:



mobeye[®]

security. anywhere. anytime.

